


Sutherland Welles Ltd.®

Sustainable, natural & earth-friendly Polymerized Tung Oil wood finishes.

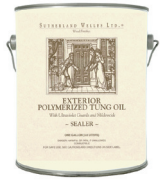

Exterior Polymerized Tung Oil Sealer

For ceilings and soffits, multiple coats of Tung Oil aren't necessary as the surface is never exposed to the sun. Also, it is very difficult to create a uniform level of sheen that reflects light evenly on ceilings, so the concept is to keep the sheen as low as possible using Exterior Polymerized Tung Oil Sealer.

Low Sheen Instructions

step 1:

- Apply Exterior Sealer
- Don't wipe
- Let cure 6-8 hours

step 2:

- Sand 400 grit
- Vacuum & tack surface
(use Mineral Sprits on a rag to clean surface)

step 3:

- Apply Exterior Sealer
- Don't wipe
- Let cure 24 hours

step 4:

- Sand 600 grit
- Vacuum & tack surface

step 5:

- Apply Exterior Sealer
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours

Exterior Ceilings & Soffits

Wood Preparation

All wood surfaces should be free of lint, dirt, grease, wax, oil and old paint. If you are refinishing old wood, please make sure to remove any loose old finish. **Sand the wood using 120 grit paper.** Avoid using higher grits as they close down the wood pores interfering with maximum penetration.

Applicator Options

Brush: Natural white china bristle brush (thin coats only)
Applicator Pad: Synthetic short napped pad

Cure Test

Push finger tips against the grain of the wood. If they glide easily over the surface, you are ready to apply your next coat.

Medium Sheen Instructions

step 1:

- Apply Exterior Sealer
- Don't wipe
- Let cure 6-8 hours

step 2:

- Sand 400 grit
- Vacuum & tack surface
(use Mineral Sprits on a rag to clean surface)

step 3:

- Apply Exterior Sealer
- Don't wipe
- Let cure 24 hours

step 4:

- Sand 600 grit
- Vacuum & tack surface

step 5:

- Apply Exterior Sealer
- Don't wipe
- Let cure 24 hours

step 6:

- Sand 600 grit
- Vacuum & tack surface

step 7:

- Apply Exterior Sealer
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours