


# Sutherland Welles Ltd.<sup>®</sup>

*Sustainable, natural & earth-friendly Polymerized Tung Oil wood finishes.*

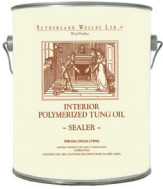

## Original Formula or Botanical Polymerized Tung Oil Sealer

### Old World Concentrated Stain

Wiping the stain will always create a lighter level of stain that allows the color to highlight the grain without drastically altering the color of the wood. We refer to this as our “rustic” staining process. Using Sealer to clear coat and/or dilute depends on the wood species and the depth of grain deposit desired.

### Stain Instructions

**step 1:**

- Apply clear coat Sealer
- Don't wipe
- Let cure 6-8 hours

**step 2:**

- Sand 400 grit
- Vacuum & tack surface  
(use Mineral Sprits on a rag to clean surface)

**step 3:**

- Mix Sealer & Stain  
(use determined Sealer : Stain ratio)

**step 4:**

- Apply Sealer & Stain mixture
- Wipe to desired color depth
- Let cure 24 hours

**step 5:**

- Sand lightly 600 grit
- Vacuum & tack surface

**step 6:**

- Apply Sealer & Stain mixture  
(Adjust stain ratio if needed)
- Wipe to desired color depth
- Let cure 24 hours

**step 7:**

- Sand lightly 600 grit
- Vacuum & tack surface

### Top Coat Options & Instructions

#### Original Formula or Botanical Polymerized Tung Oil Low, Medium or High Lustre

**step 8:**

- Apply Original or Botanical
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours

**step 9:**

- Sand if rough (600 grit or fine steel wool)
- Vacuum & tack surface

**step 10:**

- Apply Original or Botanical
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours

#### Murdoch's Uralkyd 500 Floor Finish Matte, Satin or Gloss

**step 8:**

- Apply Murdoch's Uralkyd
- Let cure 24 hours

**step 9:**

- Sand 600 grit
- Vacuum & tack surface

**step 10:**

- Apply Murdoch's Uralkyd
- Let cure 24 hours

## Rustic Staining

### Wood Preparation

All wood surfaces should be free of lint, dirt, grease, wax, oil and old paint. If you are refinishing old wood, please make sure to remove any loose old finish. **Sand the wood using 220 grit paper.** Avoid using higher grits as they close down the wood pores interfering with maximum penetration.

### Applicator Options

**Rag:** Scott<sup>®</sup> blue paper shop towels

**Brush:** Natural white china bristle brush (thin coats only)

### Cure Test

Push finger tips against the grain of the wood. If they glide easily over the surface, you are ready to apply your next coat.

### Wiping Varnish

#### Low, Medium or High Lustre

**step 8:**

- Apply Wiping Varnish
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours

**step 9:**

- Sand if rough (600 grit or fine steel wool)
- Vacuum & tack surface

**step 10:**

- Apply Wiping Varnish
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours

#### Murdoch's Table Top Satin or Gloss

**step 8:**

- Apply Murdoch's Table Top
- Let cure 24 hours

**step 9:**

- Sand 600 grit
- Vacuum & tack surface

**step 10:**

- Apply Murdoch's Table Top
- Let cure 24 hours