


# Sutherland Welles Ltd.®

*Sustainable, natural & earth-friendly Polymerized Tung Oil wood finishes.*

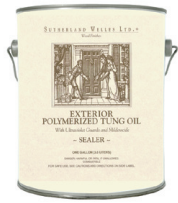

## Exterior Polymerized Tung Oil Sealer

For ceilings and soffits, multiple coats of Tung Oil aren't necessary as the surface is never exposed to the sun.

Also, it is very difficult to create a uniform level of sheen that reflects light evenly on ceilings, so the concept is to keep the sheen as low as possible using Exterior Polymerized Tung Oil Sealer.

### Low Sheen Instructions

#### step 1:

- Apply *Exterior Sealer*
- Don't wipe
- Let cure 12-24 hours

#### step 2:

- Sand (400 grit)
- Vacuum & tack surface  
(use Mineral Spirits on a rag to clean surface)

#### step 3:

- Apply *Exterior Sealer*
- Don't wipe
- Let cure 24 hours

#### step 4:

- Sand (600 grit)
- Vacuum & tack surface

#### step 5:

- Apply *Exterior Sealer*
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours

## Exterior Ceilings & Soffits

### Wood Preparation

All wood surfaces should be free of lint, dirt, grease, wax, oil and old paint. If you are refinishing old wood, please make sure to remove any loose old finish. **Sand the wood using 220 grit paper.** Avoid using higher grits as they close down the wood pores interfering with maximum penetration on the initial coat.

### Applicator Options

**Brush:** Natural white china bristle brush (thin coats only)

**Applicator Pad:** Synthetic short napped pad

### Coat Cure Test

Push finger tips against the grain of the wood. If they glide easily over the surface, you are ready to apply your next coat.

### Medium Sheen Instructions

#### step 1:

- Apply *Exterior Sealer*
- Don't wipe
- Let cure 12-24 hours

#### step 2:

- Sand (400 grit)
- Vacuum & tack surface  
(use Mineral Spirits on a rag to clean surface)

#### step 3:

- Apply *Exterior Sealer*
- Don't wipe
- Let cure 24 hours

#### step 4:

- Sand (600 grit)
- Vacuum & tack surface

#### step 5:

- Apply *Exterior Sealer*
- Don't wipe
- Let cure 24 hours

#### step 6:

- Sand (600 grit)
- Vacuum & tack surface

#### step 7:

- Apply *Exterior Sealer*
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours

**Gentle use after 24 hours. Light use after 7 days. FULL cure through after 30 days (+/- based on local humidity/elevation/temperature)**