


Sutherland Welles Ltd.®

Sustainable, natural & earth-friendly Polymerized Tung Oil wood finishes.

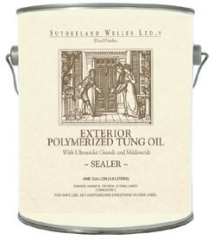

Exterior Decks & Porch Floors

Exterior Polymerized Tung Oil Sealer

Decks and porch floors typically have distinct traffic paths due to furniture configuration, entrances, and other objects that set up specific wear patterns. In an effort to re-oil the entire deck easily, and/or to treat wear areas, the Exterior Sealer will be easier to maintain. The other reason to use Exterior Polymerized Tung Oil Sealer is to avoid creating a surface that becomes too slippery and therefore dangerous when wet.

Low Sheen Instructions

step 1:

- Apply Exterior Sealer -
- Don't wipe
- Let cure 12-24 hours.

step 2:

- Sand (400 grit)
- Vacuum & tack surface

(use Mineral Spirits on a rag to clean surface)

step 3:

- Apply Exterior Sealer
- Don't wipe
- Let cure 24 hour

step 4:

- Sand (600 grit)
- Vacuum & tack surface

step 5:

- Apply Exterior Sealer
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours

Medium Sheen Instructions

step 1:

- Apply Exterior Sealer
- Don't wipe
- Let cure 12-24 hours

step 2:

- Sand (400 grit)
- Vacuum & tack surface

(use Mineral Spirits on a rag to clean surface)

step 3:

- Apply Exterior Sealer
- Don't wipe
- Let cure 24 hours

step 4:

- Sand (600 grit)
- Vacuum & tack surface

step 5:

- Apply Exterior Sealer
- Don't wipe
- Let cure 24 hours

step 6:

- Sand (600 grit)
- Vacuum & tack surface

step 7:

- Apply Exterior Sealer
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours

Wood Preparation

All wood surfaces should be free of lint, dirt, grease, wax, oil and old paint. If you are refinishing old wood, please make sure to remove any loose old finish. **Sand the wood using 220 grit paper.** Avoid using higher grits as they close down the wood pores interfering with maximum penetration in the initial coat.

Applicator Options

Brush: Natural white china bristle brush (thin coats only)

Short Napped Synthetic applicator

Coat Cure Test

Push finger tips against the grain of the wood. If they glide easily over the surface, you are ready to apply your next coat.

Pre-Finishing Instructions

Both sides of board follow step 1

step 1:

- Apply Exterior Sealer
- Don't wipe
- Let cure 12-24 hours

Top of board follow steps 2-5

step 2:

- Sand (400 grit)
- Vacuum & tack surface

(use Mineral Spirits on a rag to clean surface)

step 3:

- Apply Exterior Sealer
- Don't wipe
- Let cure 24 hours

step 4:

- Sand 600 grit
- Vacuum & tack surface

step 5:

- Apply Exterior Sealer
- Wait 10-15 min.
- Wipe unabsorbed finish
- Let cure 24 hours

For medium sheen follow steps 5-7 of Medium Sheen Instructions.



Gentle use after 24 hours. Light use after 7 days. FULL cure through after 30 days (+/- based on local humidity/elevation/temperature)