


# Sutherland Welles Ltd.®

*Sustainable, natural & earth-friendly Polymerized Tung Oil wood finishes.*

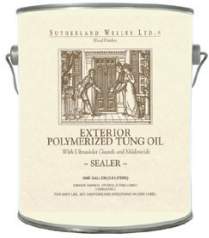

## Exterior Polymerized Tung Oil Sealer

The combination of UV guards, fungicide and Polymerized Tung Oil make this a superior beam dressing during construction or while the structure is exposed. The low solid of Polymerized Tung Oil penetrates into the green wood and allows transfer of moisture out of the log minimizing cracking. This is an alternative to a PEG solution.

### Low Sheen Instruction

#### step 1:

- Apply Exterior Sealer
- Don't wipe
- Let cure 12-24 hours

#### step 2:

- Apply Exterior Sealer
- Don't wipe
- Let cure 24 hours

## Exterior Timber Frames

### Wood Preparation

Remove dirt from the log using a wire brush without scaring the surface.

### Applicator Options

**Rag:** Scott® blue paper shop towels

**Brush:** Natural white china bristle brush (thin coats only)

### Coat Cure Test

Push fingertips against the grain of the wood. If they glide easily over the surface, you are ready to apply your next coat.

**Gentle use after 24 hours. Light use after 7 days. FULL cure through after 30 days (+/- based on local humidity/elevation/temperature)**